


SPECIAL INSTRUCTIONS

for installing the side force stabilizer of either the ULTIMATE or MAGNUM steering on a single engine equipped with a factory rudder.

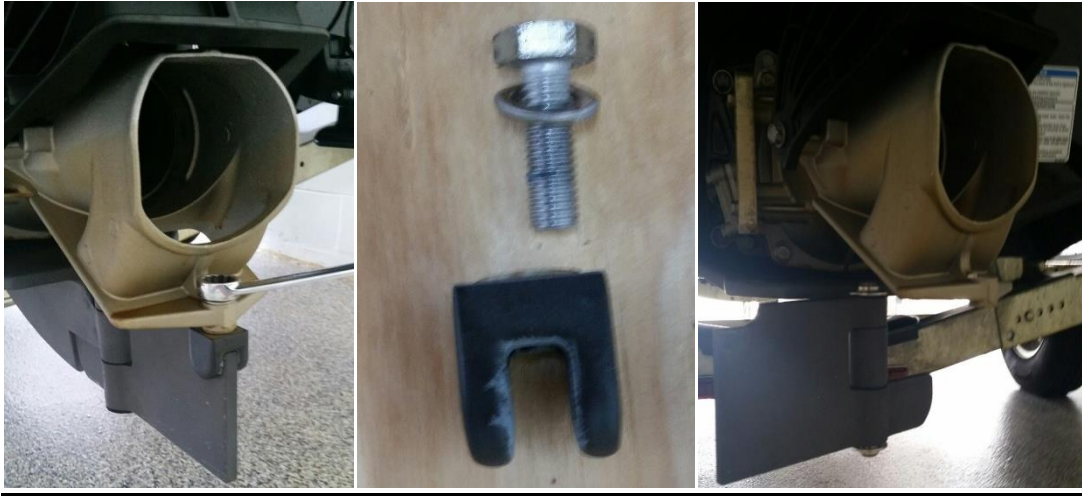

First remove the bolt and retainer that attaches the end of the nozzle to the rudder.

Now rotate the rudder back out of the way to allow access for installing the side force stabilizer.

Take care to follow the detailed instruction sheet that explains the proper installation of the side force stabilizer.



Once the side force stabilizer is installed properly you can reinstall the rudder bolt and retainer, be sure to use thread locking compound on the bolt. Now you can proceed to finish the installation of the fins etc. per the regular instructions.